

PGT-13-S Firmware Update User Manual



Table of Content

- [Table of Content](#)
- [Video Links](#)
- [Basic Information](#)
- [Install the SDD file](#)
- [Install the new Firmware](#)

Video Links

Install the SDD File	https://video.sick.com/media/t/0_kjuxm8xh
Firmware Update	https://video.sick.com/media/t/0_qezeczzy
Print of the page	

Basic Information

For a firmware update of the PGT-13-S you need to prepare:

- install SOPAS on your PC
 - can be downloaded at SICK.com
 - to install the software, you need admin rights on your PC
- install the PGT-13-S SDD file
 - to connect to the tool
 - part of the installation package
- enable a network connection to the PGT-13-S
- run the update

Install the SDD file

Here you find a detailed video about the installation progress:

https://video.sick.com/media/t/0_kjuxm8xh

The Installation of the SDD file works as followed

1. Start "SOPAS" and search for the PGT-13-S
2. Choose "Device Catalog"
3. Click on the "tooth wheel"
4. Choose "install" and "from disc"
5. Then select the latest SDD file, which fits to the firmware of your device
6. Then start the installation
7. Please run another search

If you have problems, please contact your SICK subsidiary.

Install the new Firmware


Here you find a detailed video about the update progress:

https://video.sick.com/media/t/0_qezeczzy


The Update progress is as followed:

1. Start "SOPAS" and search for the PGT-13-S
2. Be sure, that the right SDD file is installed

3. Here you also see the version of the old firmware

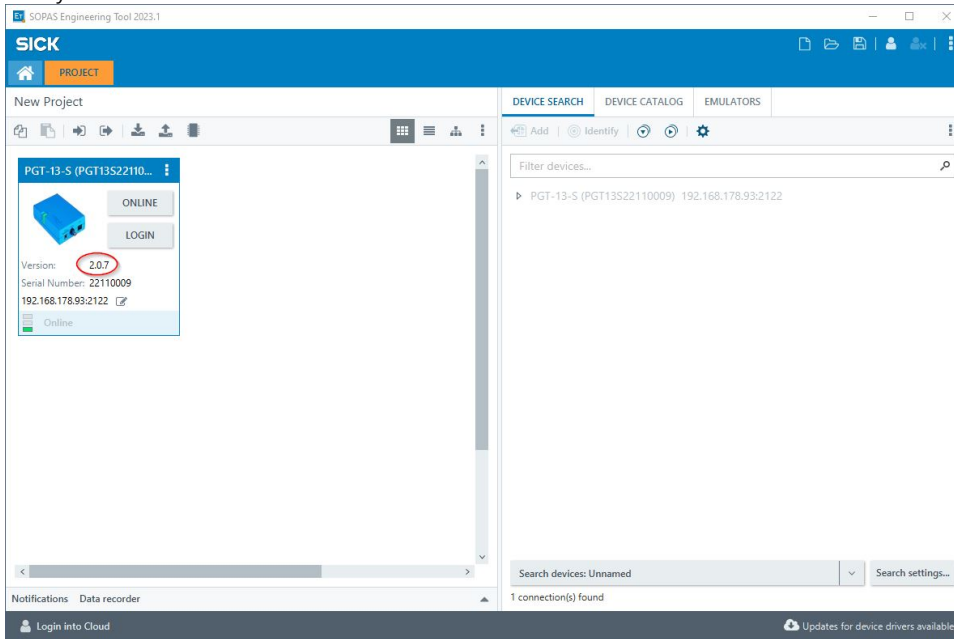


4. Log in as "Authorized Client"
The password is: **AuthorizedClient**

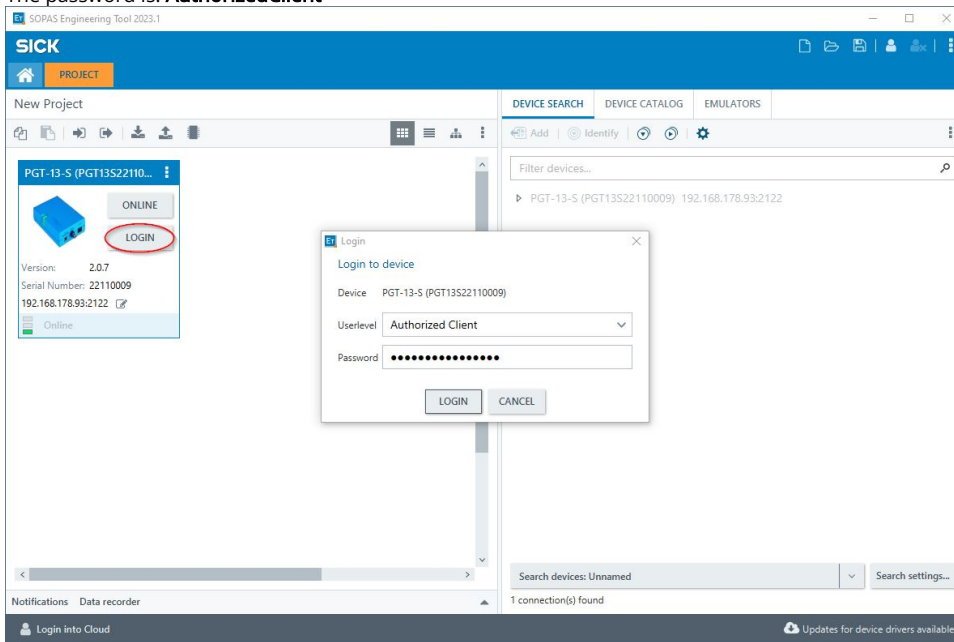


5. You see, that you are logged on, that the button changed to "Logout".

6. Open the PGT-13-S window by clicking on the PGT-13-S icon

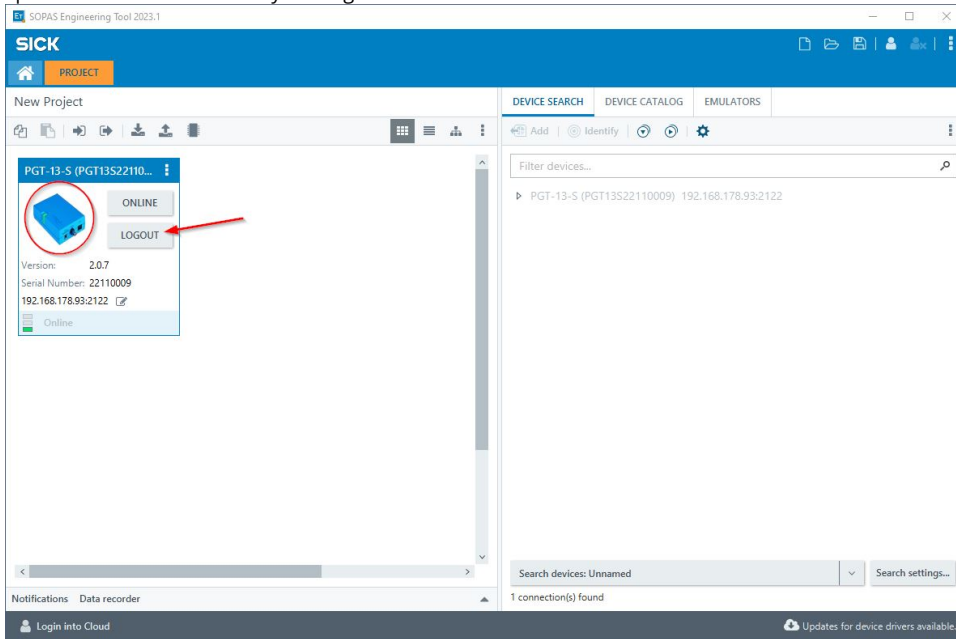


7. Choose the tab Update
8. "Load File"
9. Select the update file

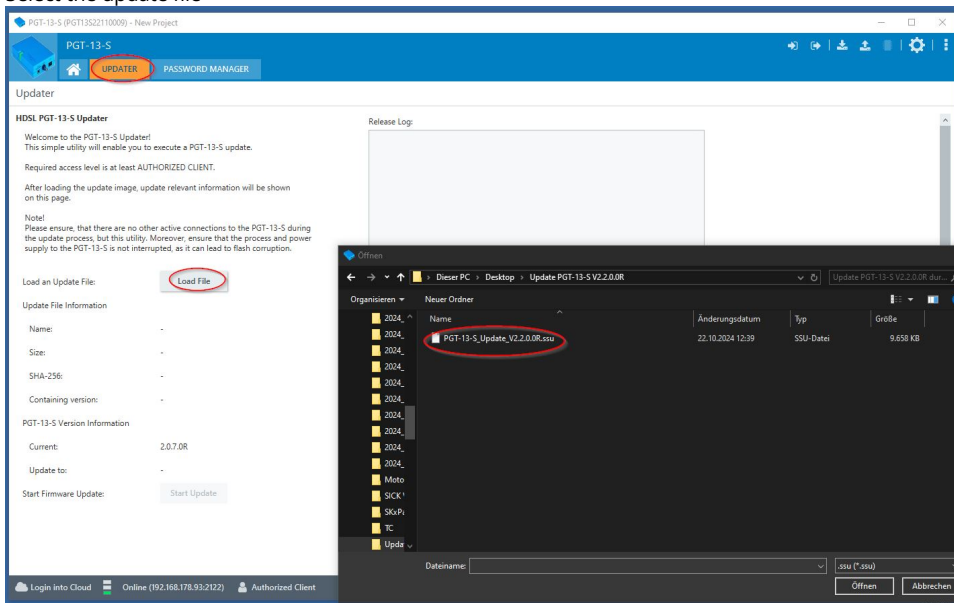


10. "Start" the Update

11. You have to type in once again the password (**AuthorizedClient**) for the user level "Authorized Client"

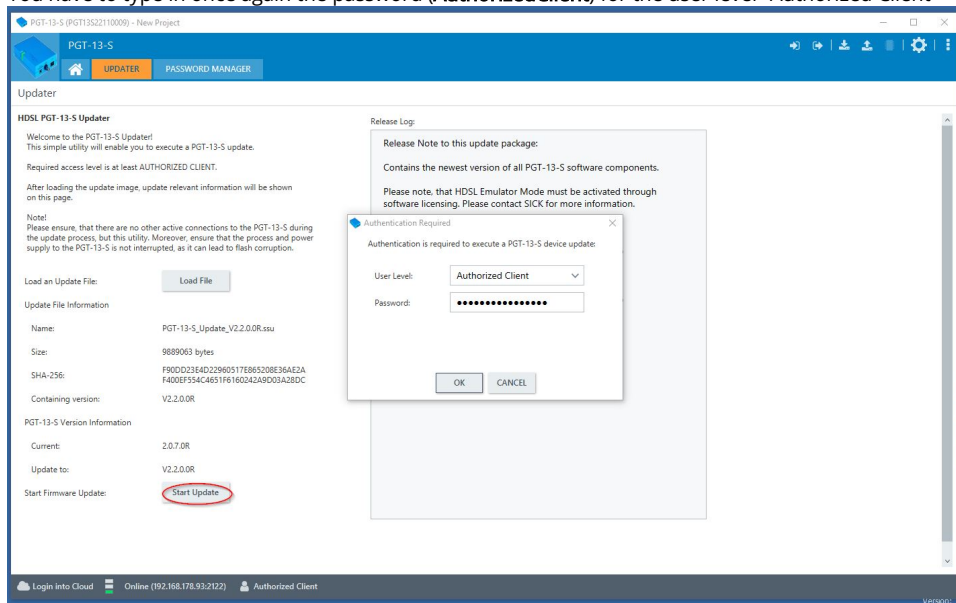

12. The update is running now

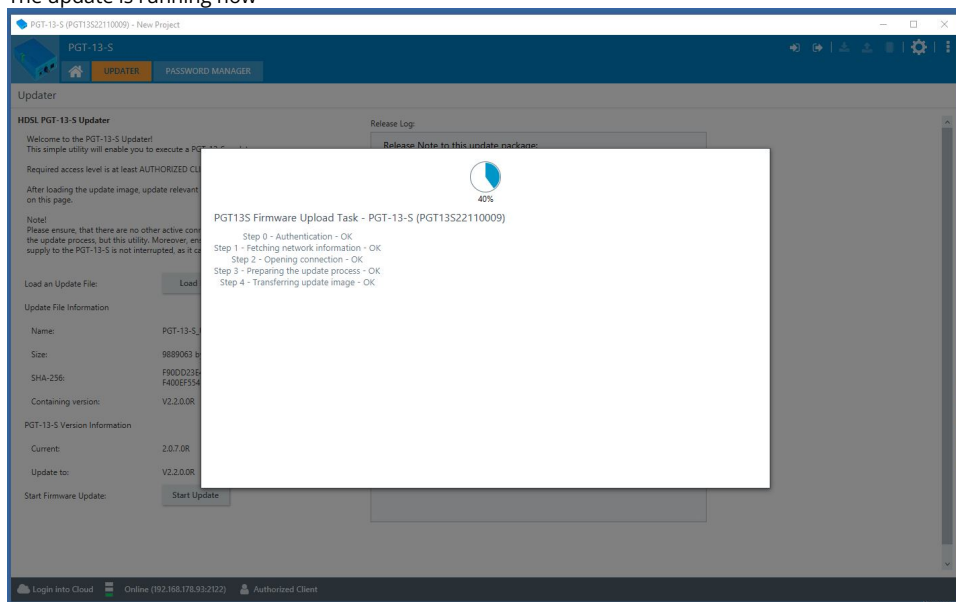

13. After finishing the update, please do a power cycle at the PGT-13-S

14. If you then search again, for the PGT-13-S, you see the updated firmware

